











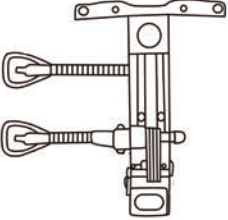

 



Assembly Instruction

4524067 Pro-Game

 Ax1	 Cx1	 Ex1	 Gx5	 Jx3 M8x20 mm
			 Rx1	 Kx4 M6x20 mm
				 Lx6 M6x25 mm
				 Mx4 M8x35 mm
 Bx1	 Dx1	 Fx1	 lx1	 Nx4
				 Px1
				 Qx1

